

An Instruction Manual

Mode switching F1-F9



I. “档位+” Gear plus and “档位-” gear minus adjust the knock speed, there are nine kinds of knock speed

II. “模式切换” Mode switching nine knock mode cycles.F1-F9

F1,Default mode, keep knocking or shaking, shut down after 15 minutes.

F2,Vibrate every ten seconds, or knock for ten seconds, stop for ten seconds, and shut down after 30 minutes

F3,Vibrate every 30 seconds, or knock for 30 seconds, stop for 30 seconds, and shut down after 1 hour

F4,Vibrate every 1 minute, or knock for 1 minute, stop for 1 minute, shut down after 2 hours

F5,Vibrate every 2 minutes, or knock for 2 minutes, stop for 2 minutes, and shut down after 4 hours

F6,Vibrate every 5 minutes, or knock for 5 minutes, stop for 5 minutes, and shut down after 6 hours

F7Vibrate every 10 minutes, or knock for 10 minutes, stop for 10 minutes, and shut down after 12 hours,

F8,Vibrate every 20 minutes, or knock for 20 minutes, stop for 20 minutes, shut down after 24 hours

F9,Vibrate every 30 minutes, or knock for 30 minutes, stop for 30 minutes, and shut down for 1 to 4 hours

III. “预约” When making an appointment, first adjust the

required mode. Press the vibration key to start working, then press the appointment adjustment to turn on the machine after 1-8 hours, and then press the appointment start to start the time.

IV. “预约启” Start appointment, start timing

V. “预约消” cancel reservation

VI. “智能键” Pressing this key will display 888, and then cause other keys to be locked. Just press this key again to unlock.

VII. After the machine is powered on, you need to first press the power on button, and then press the vibration button to start working.

Screen Description:

P stands for strength

E stands for the appointment time

U The beginning of the u word represents the vibration mode

L starts with knock mode (not applicable to machines without knock function)

H stands for mixed mode (vibration plus knocking)

Reminder:

Thank you for using our products. The product warranty is one year. The product has over-current protection, over-voltage protection, overheat power-off protection, environmental protection materials, in line with national standards, 3C certification, safer to use.

Installation method

1. First, connect the wire head of the power adapter with the female head of the host,

and insert the power supply into the socket to test the machine.

2. After confirming that there is no problem with the machine, insert a labeled rod into the machine, with a total of 4 sections, and insert the threaded rod base after splicing

In the bottom section, if you are worried about damaging the roof, you can put a layer of towel cloth on the top of the main engine, and then stand at attention to the machine

According to the height of the house, tighten the plum blossom handle on the threaded rod to adjust the height. If the rod is too high, 1-3 sections can be removed. If it is not long enough, you can add books or small stools at the bottom.

Note: it is recommended that I have a helper to help the first installation of the pole. Screw rod base do not put sofa and other soft places, otherwise it will fall!

Make sure that the shorter the pole, the more stable it will be. A table with a stool at the bottom. Can effectively reduce the impact on their own and downstairs.

3. After installation, observe the condition of the machine and pole. If it will fall down, it means that it has not been installed. Please make sure to take videos and photos

Consulting customer service, our customer service can correctly guide the installation.



Power machine



Stainless steel connecting rod



Screw base



The power adapter



Remote control



installation is complete

Common problems and precautions

Q:What is the reason that the telescopic rod is easy to move or fall down after starting the machine?

A: the telescopic rod must be kept heavy and straight, and the base nut must be tightened

Don't put them on weak stools and soft objects

Q:Why didn't the remote control respond?

A: because of air traffic control in Taiwan and panyuan, voice controllers are not available

The battery pack has been removed before delivery

Batteries, normal large supermarkets or stationery stores are available, optional control

The effective distance is about 2 meters

Q;How does the high configuration machine knock function not work after power on?

A: the machine will work only when the display is facing down!